MICROWAVE OVEN

MR5481G / MR5482W

MR6481G / MR6482W

SERVICE Manual

MICROWAVE OVEN

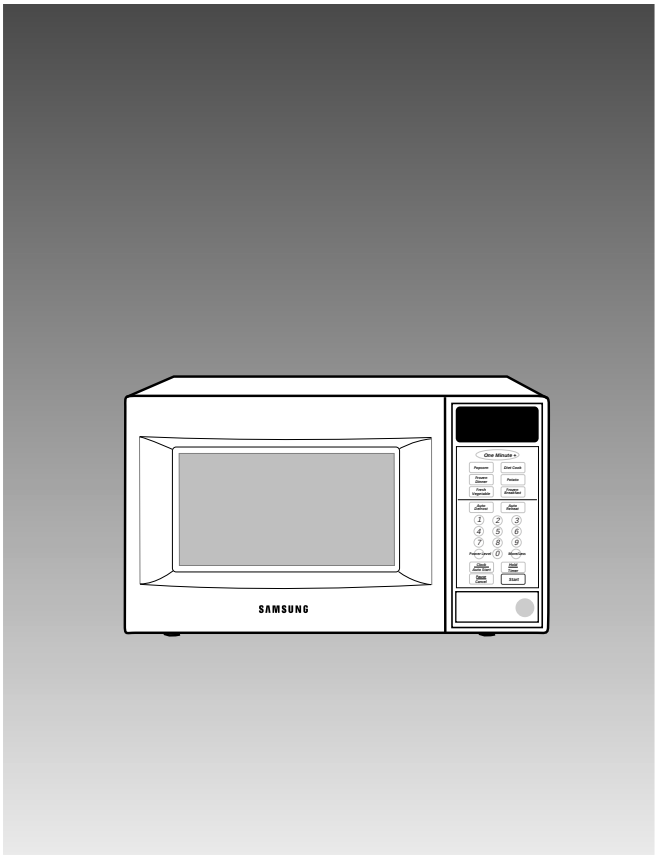

CONTENTS

1. Precaution

2. Specifications

3. Operating Instructions

4. Disassembly and Reassembly

5. Alignment and Adjustments

6. Troubleshooting

7. Exploded Views and Parts List

8. PCB Diagrams

9. Schematic Diagrams

SEA

PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(a) Do not operate or allow the oven to be operated with the door open.
(b) Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary:
(1) Interlock operation,
(2) proper door closing,
(3) seal and sealing surfaces (arcing, wear, and other damage),
(4) damage to or loosening of hinges and latches,
(5) evidence of dropping or abuse.

(c) Before turning on microwave power for any service test or inspection within the microwave generating compartments, check the magnetron, wave guide or transmission line, and cavity for proper alignment, integrity, and connections.
(d) Any defective or misadjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.
(e) A Microwave leakage check to verify compliance with the Federal performance standard should be performed on each oven prior to release to the owner.

1. Precaution

Follow these special safety precautions. Although the microwave oven is completely safe during ordinary use, repair work can be extremely hazardous due to possible exposure to microwave radiation, as well as potentially lethal high voltages and currents.

1-1 Safety precautions (⚠)

1. All repairs should be done in accordance with the procedures described in this manual. This product complies with Federal Performance Standard 21 CFR Subchapter J (DHHS).

2. Microwave emission check should be performed to prior to servicing if the oven is operative.

3. If the oven operates with the door open : Instruct the user not to operate the oven and contact the manufacturer and the center for devices and radiological health immediatly.

4. Notify the Central Service Center if the microwave leakage exceeds 5 mW/cm^2

5. Check all grounds.

6. Do not power the MWO from a "2-prong" AC cord. Be sure that all of the built-in protective devices are replaced. Restore any missing protective shields.

7. When reinstalling the chassis and its assemblies, be sure to restore all protective devices, including: nonmetallic control knobs and compartment covers.

8. Make sure that there are no cabinet openings through which people--particularly children--might insert objects and contact dangerous voltages. Examples: Lamp hole, ventilation slots.

9. Inform the manufacturer of any oven found to have emmission in excess of 5 mW/cm^2, Make repairs to bring the unit into compliance at no cost to owner and try to determine cause.
   Instruct owner not to use oven until it has been brought into compliance.

   SAMSUNG ELECTRONICS AMERICA, INC.
   HEADQUARTER OFFICE
   105 CHALLENGER ROAD
   RIDGEFIELD PARK N.J.07660-0511

10. Service technicians should remove their watches while repairing an MWO.

11. To avoid any possible radiation hazard, replace parts in accordance with the wiring diagram. Also, use only the exact replacements for the following parts: Primary and secondary interlock switches, interlock monitor switch.

12. If the fuse is blown by the Interlock Monitor Switch: Replace all of the following at the same time: Primary and secondary switches, as well as the Interlock Monitor Switch. The correct adjustment of these switches is described elsewhere in this manual. Make sure that the fuse has the correct rating for the particular model being repaired.

13. Design Alteration Warning:
    Use exact replacement parts only, i.e., only those that are specified in the drawings and parts lists of this manual. This is especially important for the Interlock switches, described above. Never alter or add to the mechanical or electrical design of the MWO. Any design changes or additions will void the manufacturer's warranty.10.Always unplug the unit's AC power cord from the AC power source before attempting to remove or reinstall any component or assembly.

14. Never defeat any of the B+ voltage interlocks. Do not apply AC power to the unit (or any of its assemblies) unless all solid-state heat sinks are correctly installed.

15. Some semiconductor ("solid state") devices are easily damaged by static electricity. Such components are called Electrostatically Sensitive Devices (ESDs). Examples include integrated circuits and field-effect transistors.

    Immediately before handling any semiconductor components or assemblies, drain the electrostatic charge from your body by touching a known earth ground.

16. Always connect a test instrument's ground lead to the instrument chassis ground *before* connecting the positive lead; always remove the instrument's ground lead last.

1-2 Special Servicing Precautions (Continued)

17. When checking the continuity of the witches or transformer, always make sure that the power is OFF, and one of the lead wires is disconnected.
18. Components that are critical for safety are indicated in the circuit diagram by shading, ⚠ or ⚠.
19. Use replacement components that have the same ratings, especially for flame resistance and dielectric strength specifications. A replacement part that does not have the same safety characteristics as the original might create shock, fire or other hazards.

1-3 Special High Voltage Precautions

1. High Voltage Warning
   Do not attempt to measure any of the high voltages--this includes the filament voltage of the magnetron. High voltage is present during any cook cycle.

   Before touching any components or wiring, always unplug the oven and discharge the high voltage capacitor (See Figure 1-1)

2. The high-voltage capacitor remains charged about 30 seconds after disconnection. Short the negative terminal of the high-voltage capacitor to the oven chassis. (Use a screwdriver.)

3. High voltage is maintained within specified limits by close-tolerance, safety-related components and adjustments. If the high voltage exceeds the specified limits, check each of the special components.

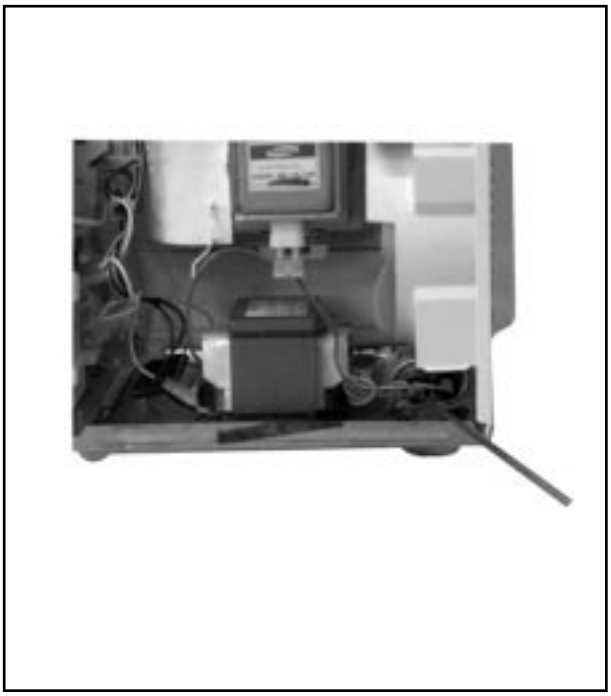

Fig. 1-1. Discharging the High Voltage Capacitor

2. Specifications

2-1 Table of Specifications

ITEM \ MODEL	MR5481G / MR5482W	MR6481G / MR6482W
TIMER	99 MINUTES 99 SECONDS	99 MINUTES 99 SECONDS
POWER SOURCE	120V/60HZ, AC	120V/60HZ, AC
POWER CONSUMPTION	MICROWAVE : 1,300W	MICROWAVE : 1,400W
OUTPUT POWER	FROM 90W TO 900W (10 LEVEL POWER)	FROM 90W TO 900W (10 LEVEL POWER)
	(IEC-705 TEST PROCEDURE)	(IEC-705 TEST PROCEDURE)
OPERATING FREQUENCY	2,450MHz	2,450MHz
MAGNETRON	OM75PH(31)ESS	OM75P(B1)ESS
COOLING METHOD	COOLING FAN MOTOR	COOLING FAN MOTOR
OUTSIDE DIMENSIONS	$20^{11/32}$(W) x $11^{11/32}$(H) x $14^{5/8}$(D)	$21^{29/32}$(W) x $12^{11/32}$(H) x $16^{29/32}$(D)
NET WEIGHT	33.1 lbs.	40.8 lbs.
SHIPPING WEIGHT	37.5 lbs	46.3 lbs.

2-2 Comparison Chart

FEATURE \ MODEL	MR5481G / MR5482W MR6481G / MR6482W
MORE/LESS	O
AUTO REHEAT	O
AUTO DEFROST	O
TIME COOK	O
POWER LEVEL	O
INSTANT COOK	O
MEMORY	O
BOOST	-
CHILD LOCK	O
CLOCK	O
GRILL	-
COMBI	-

3. Operating Instructions

3-1 Control Panel

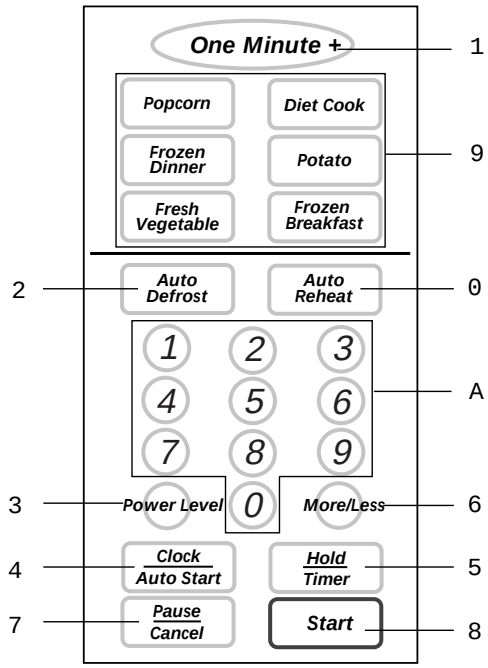

1. One Minute + Button
2. Auto Defrost Button
3. Power Level Selection Button
4. Clock/Auto Start Button
5. Hold/Timer Button
6. More/Less Button
7. Pause Canel Button
8. Start Button
9. Instant Cook Buttons
10. Auto Reheat Button
11. Number Key Buttons

3-2 Features & External Views

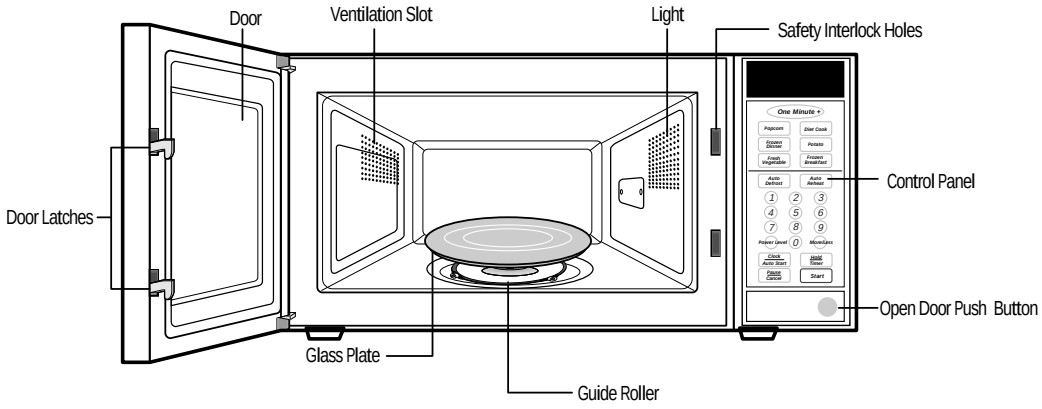

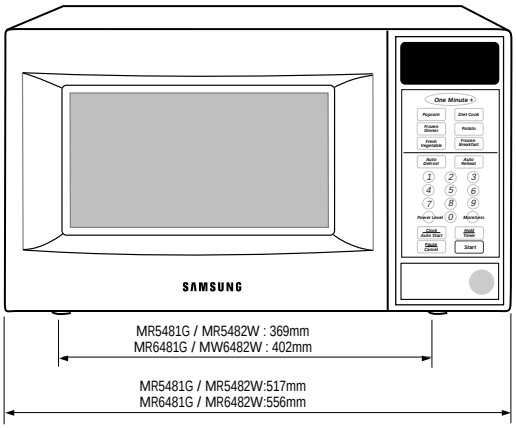

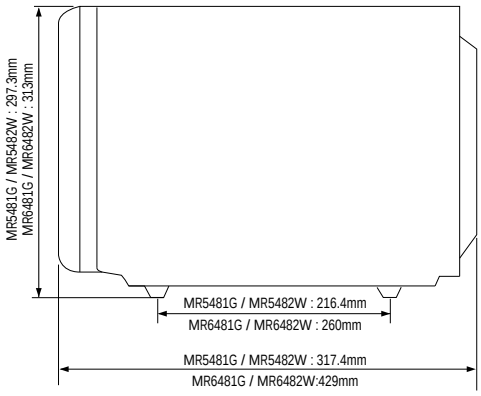

4. Disassembly and Reassembly

4-1 Replacement of Magnetron, Motor Assembly and Lamp

Remove the magnetron including the shield case, permanent magnet, choke coils and capacitors (all of which are contained in one assembly).

1. Disconnect all lead wires from the magnetron and lamp.
2. Remove the air cover.
3. Remove screws securing the magnetron to the wave guide.
4. Take out the magnetron very carefully.
5. Remove screws from the back panel.
6. Take out the fan motor.
7. Remove the oven lamp by pulling out from hole of air cover.

NOTE1: When removing the magnetron, make sure that its antenna does not hit any adjacent parts, or it may be damaged.

NOTE2: When replacing the magnetron, be sure to remount the magnetron gasket in the correct position and make sure the gasket is in good condition.

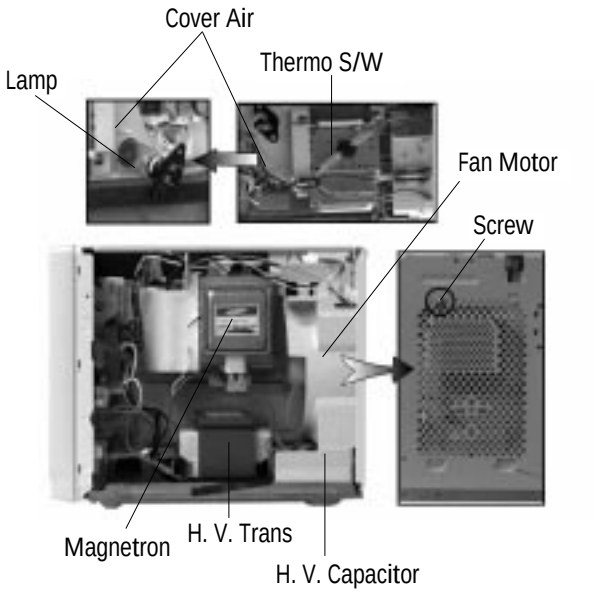

4-2 Replacement of High Voltage Transformer

1. Discharge the high voltage capacitor.
2. Disconnect all the leads.
3. Remove the mounting bolts.
4. Reconnect the leads correctly and firmly.

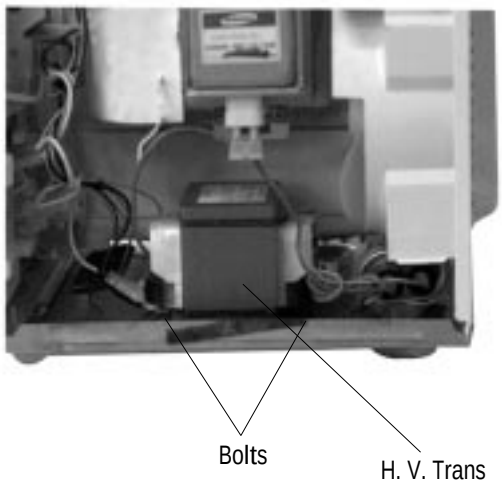

4-3 Replacement of Door Assembly

4-3-1 Removal of Door Assembly

Remove screws securing the upper hinge and lower hinge. Then remove the door assembly.

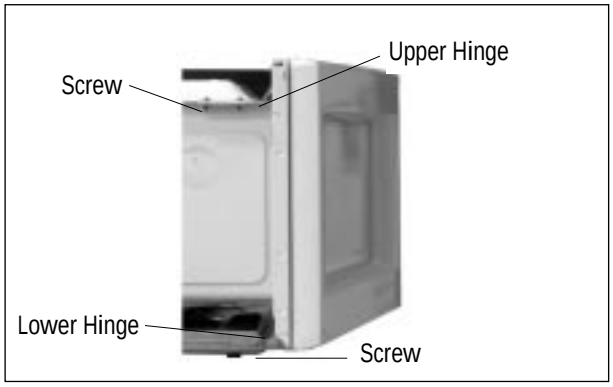

4-3-2 Removal of Door "C"

Insert flat screwdriver into the gap between Door "A" and Door "C" to remove Door "C". Be careful when handling Door "C" because it is fragile.

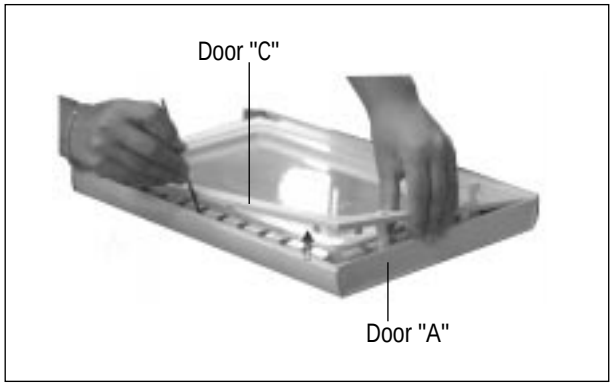

4-3-3 Removal of Door "E"

Following the procedure as shown in the figure, insert and bend a thin metal plate between Door "E" and Door "A" until you hear the 'tick' sound.

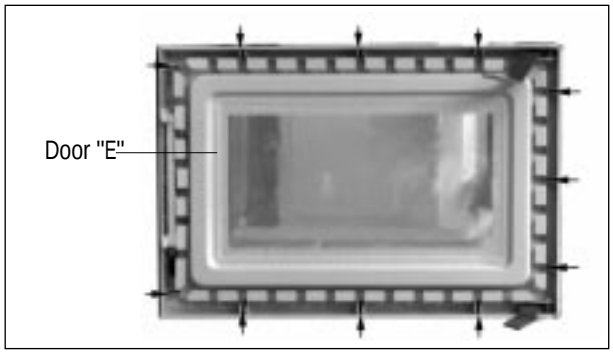

1. Insertion depth of the thin metal plate should be 0.5mm or less.

4-3-4 Removal of Key Door & Spring

Remove pin hinge from Door "E"
Detach spring from Door "E" and key door.

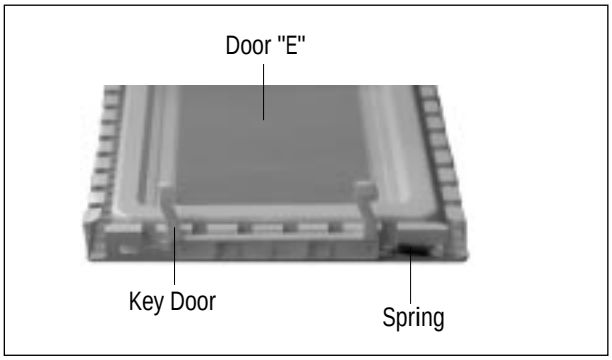

4-3-5 Reassembly Test

After replacement of the defective component parts of the door, reassemble it and follow the instructions below for proper installation and adjustment so as to prevent an excessive microwave leakage.

1. When mounting the door to the oven, be sure to adjust the door parallel to the bottom line of the oven face plate by moving the upper hinge and lower hinge in the direction necessary for proper alignment.
2. Adjust so that the door has no play between the inner door surface and oven front surface. If the door assembly is not mounted properly, microwave energy may leak from the space between the door and oven.
3. Do the microwave leakage test.

4-4 Replacement of Fuse

1. Disconnect the oven from the power source.
2. Remove the 15A(MR5481G / MR5482W) / 20A(MR6481G / MR6482W) fuse in the fuse holder.
3. When replacing the fuse, be sure to use an exact replacement part. If new fuse blows out again after replacement, check the primary interlock switch, door sensing switch and interlock monitor switch.
4. When the above three switches operate properly, check if any other part such as the control circuit board, blower motor or high voltage transformer is defective.

4-5 Replacement of Drive Motor

1. Take out the glass tray and the guide roller from the cavity.
2. Turn the oven upside down to replace the drive motor.
3. Remove 4 screws securing the buttom plate.
4. Remove a screw securing the drive motor cover.
5. Disconnect all the lead wires from the drive motor.
6. Remove screws securing the drive motor to the cavity.
7. Remove the drive motor and the coupler.
8. When replacing the drive motor, be sure to remount it in the correct position with the coupler.
9. Connect all the leads to the drive motor.
10. Screw the drive motor cover to the base plate with a screw driver.

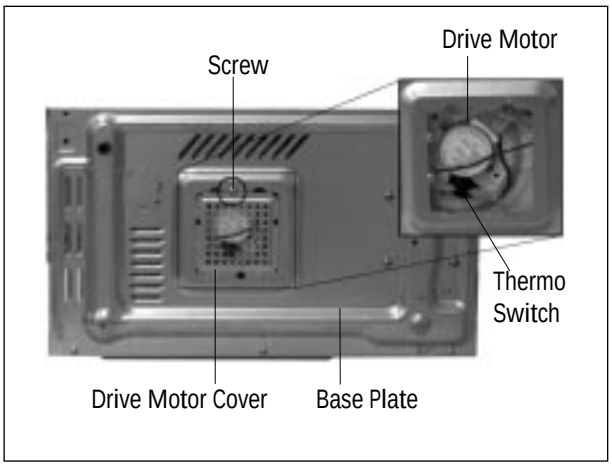

4-6 Replacement of Control Circuit Board

4-6-1 Removal of Control Box Assembly

1. Be sure to ground any static electric charge in your body and never touch the control circuit.
2. Disconnect the connectors from the control circuit board.
3. Remove screws securing the control box assembly.
4. Remove the screw securing the ground tail of the keyboard.

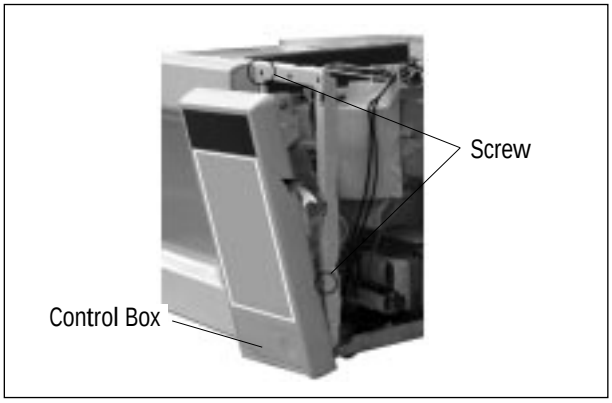

4-6-2 Removal of P.C.B Assembly

1. Pull the lever end of the plastic fastener and remove the Flexible Printed Circuit(FPC) of membrane panel.
2. Remove screws securing the control circuit board.
3. Lift up the control circuit board from the Ass'y control box.
4. When reconnecting the FPC connector, make sure that the holes on the connector are properly engaged with the hooks on the Plastic Fastener.

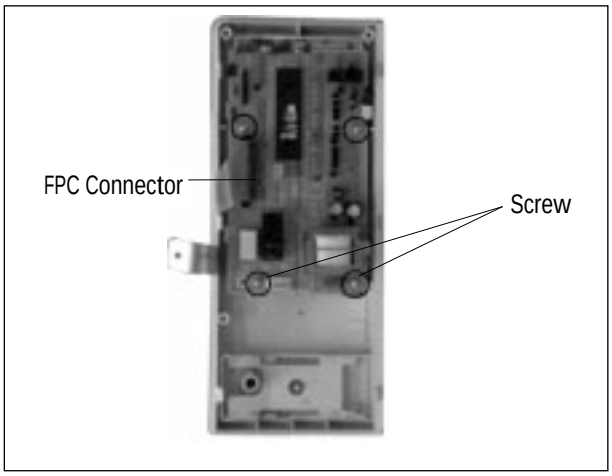

4-6-3 Removal of Window Display & Membrane Panel

1. Window display should not be disassembled as its mounting tabs will be broken. If repair work is difficult, replace with Ass'y control panel.
2. The membrane key board is attached to the escutcheon base with doublefaced adhesive tape. Therefore, applying hot air such as using of hair dryer is recommended for smoother removal.
3. When installing new membrane key board, make sure that the surface of escutcheon base is cleaned sufficiently so that any problems (shorted contacts or uneven surface) can be avoided.

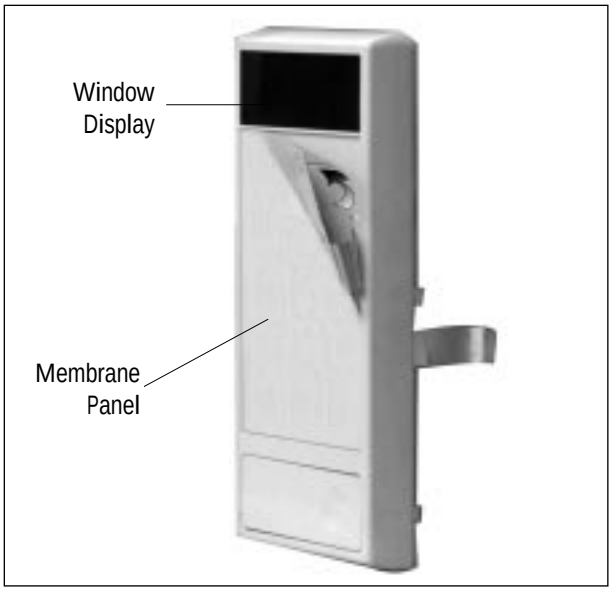

5. Alignment and Adjustments

PRECAUTION

1. High voltage is present at the high voltage terminals during any cook cycle.
2. It is neither necessary nor advisable to attempt measurement of the high voltage.
3. Before touching any oven components or wiring, always unplug the oven from its power source and discharge the high voltage capacitor.

5-1 High Voltage Transformer

1. Remove connectors from the transformer terminals and check continuity.
2. Normal resistance readings are as follows:

MODEL	SHV-557UC1
Secondary	90Ω ± 10%
Filament	Shows Continuity
Primary	0.40Ω ϒ± 10%

(Room temperature = 20˚C)

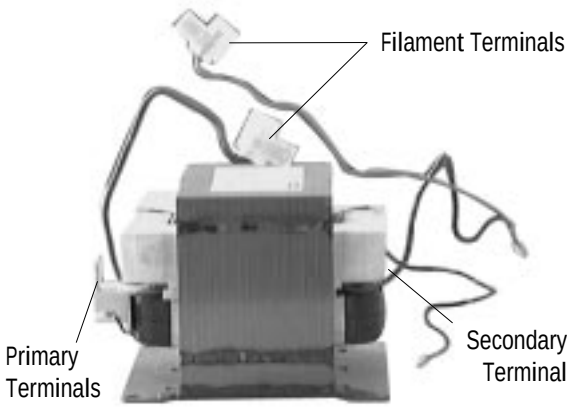

5-2 Low Voltage Transformer

1. The low voltage transformer is located on the control circuit board.
2. Remove the low voltage transformer from the PCB Ass'y and check continuity.
3. Normal resistor reading is shown in the table.

Terminals	Resistance	
	DN-5574W	CE-5574W
1~2(Input)	312.3Ω	286.5Ω
4~5(Output17V)	11.22Ω	9.245Ω
7~8(Output2.7V)	2.213Ω	1.735Ω

5-3 Magnetron

1. Continuity checks can indicate only an open filament or a shorted magnetron. To diagnose an open filament or shorted magnetron :
2. Isolate the magnetron from the circuit by disconnecting its leads.
3. A continuity check across the magnetron filament terminals should indicate one ohm or less.
4. A continuity check between each filament terminal and magnetron case should read open.

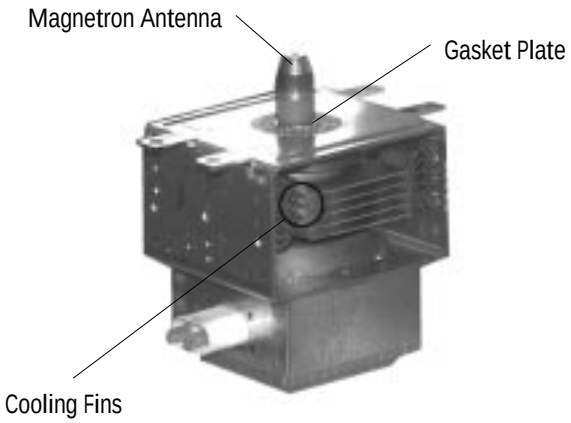

5-4 High Voltage Capacitor

1. Check continuity of the capacitor with the meter set at the highest resistance scale.
2. Once the capacitor is charged, a normal capacitor shows continuity for a short time, and then indicates 9MΩ.
3. A shorted capacitor will show continuous continuity.
4. An open capacitor will show constant 9MΩ.
5. Resistance between each terminal and chassis should read infinite.

5-5 High Voltage Diode

1. Isolate the diode from the circuit by disconnecting its leads.
2. With the ohm-meter set at the highest resistance scale, measure across the diode terminals. Reverse the meter leads and read the resistance. A meter with 6V, 9V or higher voltage batteries should be used to check the front-to back resistance of the diode (otherwise an infinite resistance may be read in both directions). The resistance of a normal diode will be infinite in one direction and several hundred KΩ in the other direction.

5-6 Main Relay and Power Control Relay

1. The relays are located on the PCB Ass'y. Isolate them from the main circuit by disconnecting the leads.
2. Operate the microwave oven with a water load in the oven. Set the power level set to high.
3. Check continuity between terminals of the relays after the start pad is pressed.

5-7 Adjustment of Primary Switch, Door Sensing Switch and Monitor Switch

Precaution

For continued protection against radiation hazard, replace parts in accordance with the wiring diagram and be sure to use the correct part number for the following switches: Primary interlock,secondary interlock and door sensing switches, and the interlock monitor switch (replace all together). Then follow the adjustment procedures below. After repair and adjustment, be sure to check the continuity of all interlock switches and the interlock monitor switch.

1. When mounting Primary switch and Interlock Monitor switch to Latch Body, consult the figure.
2. No specific adjustment during installation of Primary switch and Monitor switch to the latch body is necessary.
3. When mounting the Latch Body to the oven assembly, adjust the Latch Body by moving it so that the oven door will not have any play in it. Check for play in the door by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the Latch Body to the oven assembly.
4. Reconnect to Monitor switch and check the continuity of the monitor circuit and all latch switches again by following the components test procedures.
5. Confirm that the gap between the switch housing and the switch actuator is no more than 0.5mm when door is closed.

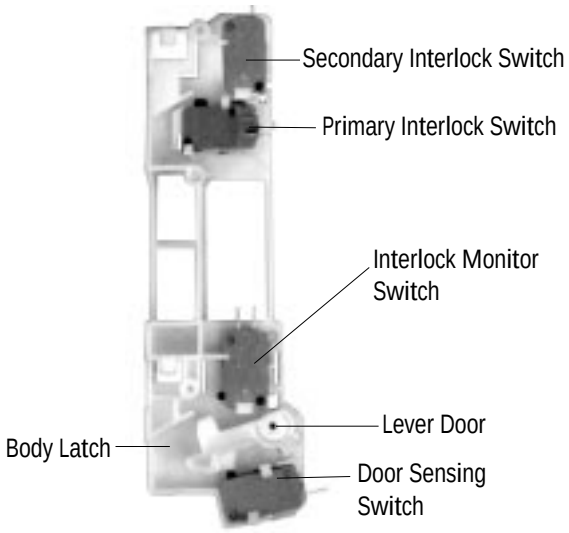

	Door Open	Door Closed
Primary switch	∞	0
Secondary switch	∞	0
Monitor switch (COM-NC)	0	∞
Door Sensing S/W	∞	0

5-8 Output Power of Magnetron

CAUTION
MICROWAVE RADIATION

PERSONNEL SHOULD NOT ALLOW EXPOSURE TO MICROWAVE RADIATION FROM MICROWAVE GENERATOR OR OTHER PARTS CONDUCTING MICROWAVE ENERGY.

The output power of the magnetron can be measured by performing a water temperature rise test.
Equipment needed :
* Two 1-liter cylindrical borosilicate glass vessel (Outside diameter 190 mm)
* One glass thermometer with mercury column
NOTE: Check line voltage under load. Low voltage will lower the magnetron output. Make all temperature and time tests with accurate equipment.
1. Fill the one liter glass vessel with water.
2. Stir water in glass vessel with thermometer, and record the water temperature ("T_1", 10±1˚C) in the glass vessel.
3. After moving the water into another glass vessel, place it in the center of the cooking tray. Set the oven to high power and operate for 48 seconds exactly. (1 seconds included as a holding time of magnetron oscillation:)
4. When heating is finished, stir the water again with the thermometer and measure the temperature ("T_2").
5. Subtract T_1 from T_2. This will give you the water temperature rise. (ΔT)
6. The output power is obtained by the following formula;

$$\text{Output Power} = \frac{4.187 \times 1000 \times \Delta T + 0.88 \times Mcx(T_2 - T_0)}{46.5}$$

46.5: Heating Time (sec)
4.187 : Coefficient for Water
1000 : Water (cc)
ΔT : Temperature Rise (T_2-T_1)
Mc : Cylindrical borosilicate glass weight
To : Room temperature.

7. Normal temperature rise for this model is 9˚C to 11˚C at 'HIGH'.
NOTE 1: Variations or errors in the test procedure will cause a variance in the temperature rise. Additional power test should be made if temperature rise is marginal.
NOTE 2: Output power in watts is computed by multiplying the temperature rise (step 5) by a factor of 80(90) times the of centigrade temperature.

5-9 Microwave Heat Distribution - Heat Evenness

The microwave heat distribution can be checked indirectly by measuring the water temperature rise at certain positions in the oven:

1. Prepare five beakers made of 'Pyrex', having 100 milliliters capacity each.
2. Measure exactly 100milliliters off water load with a measuring cylinder, and pour into each beaker.
3. Measure the temperature of each water load. (Readings shall be taken to the first place of decimals.)
4. Put each beaker in place on the cooking tray as illustrated in figure below. Start heating.
5. After heating for 2 minutes, measure the water temperature in each beaker.
6. Microwave heat distribution rate can be calculated as follows:

$$\text{Heat Distribution} = \frac{\text{Minimum Temperature Rise}}{\text{Maximum Temperature Rise}} \times 100(\%)$$

The result should exceed 65%.

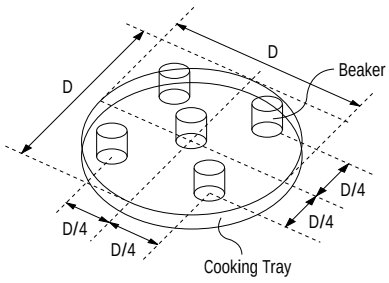

5-10 Procedure for Measurement of Microwave Energy Leakage

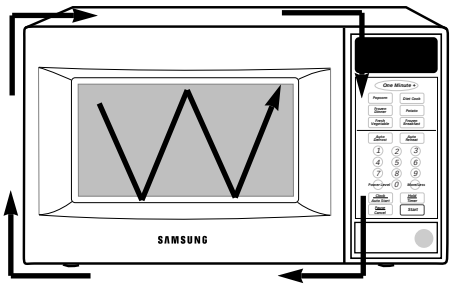

1) Pour 275 ±15cc of 20±5˚C (68± 9˚F) water in a beaker which is graduated to 600cc, and place the beaker in the center of the oven.
2) Start to operate the oven and measure the leakage by using a microwave energy survey meter.
3) Set survey meter with dual ranges to 2,450MHz.
4) When measuring the leakage, always use the 2 inch spacer cone with the probe. Hold the probe perpendicular to the cabinet door. Place the spacer cone of the probe on the door and/or cabinet door seam and move along the seam, the door viewing window and the exhaust openings moving the probe in a clockwise direction at a rate of 1 inch/sec. If the leakage testing of the cabinet door seam is taken near a corner of the door, keep the probe perpendicular to the areas making sure that the probe end at the base of the cone does not get closer than 2 inches to any metal. If it gets closer than 2 inches, erroneous readings may result.
5) Measured leakage must be less than 5mW/cm2, after repair or adjustment.

Maximum allowable leakage is 5mW/cm^2.
4mW/cm^2 is used to allow for measurement and meter accuracy

5-11 Check for Microwave Leakage

1. Remove the outer panel.
2. Pour 275±15cc of 20±5˚C(68±9˚F) water in a beaker which is graduated to 600cc, and place the beaker in the center of the oven.
3. Start the oven at the highest power level.
4. Set survey meter dual ranges to 2,450MHz.
5. Using the survey meter and spacer cone as described above, measure arnear the opening of magnetron, the surface of the air guide and the surface of the wave guide as shown in the following photo.(but avoid the high voltage components.) The neading should be less than 5mW/cm^2.

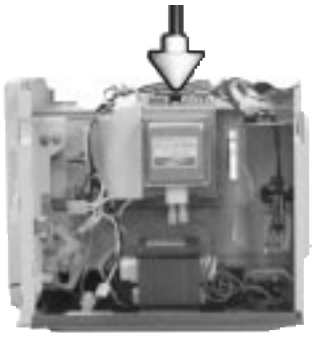

5-12. Note on Measurement

1) Do not exceed the limited scale.
2) The test probe must be held on the grip of the handle, otherwise a false reading may result when the operator's hand is between the handle and the probe.
3) When high leakage is suspected, do not move the probe horizontally along the oven surface; this may cause damage to the probe.
4) Follow the recommendation of the manufacturer of the microwave energy survey meter.

5-13 Leakage Measuring Procedure

5-9-1 Record keeping and notification after measurement

1) After adjustment and repair of a radiarion preventing device, make a repair record for the measured values, and keep the data.
2) If the radiation leakage is more than 5 mW/§† after determining that all parts are in good condition, functioning properly and the identical parts are replaced as listed in this manual notift that fact to ;

SAMSUNG ELECTRONICS AMERICA, INC.
HEADQUARTER OFFICE
105 CHALLENGER ROAD
RIDGEFIELD PARK N.J.07660-0511

5-9-2 At least once a year have the microwave energy survey meter checked for accuracy by its manufacturer.

6. Troubleshooting

PRECAUTION

1. CHECK GROUNDING BEFORE CHECKING FOR TROUBLE.
2. BE CAREFUL OF THE HIGH VOLTAGE CIRCUIT.
3. DISCHARGE THE HIGH VOLTAGE CAPACITOR.
4. WHEN CHECKING THE CONTINUITY OF THE SWITCHES OR TRANSFORMER, DISCONNECT ONE LEAD WIRE FROM THESE PARTS AND THEN CHECK CONTINUITY WITHOUT THE POWER SOURCE ON. TO DO OTHERWISE MAY RESULT IN A FALSE READING OR DAMAGE TO YOUR METER.
5. DO NOT TOUCH ANY PART OF THE CIRCUIT OR THE CONTROL CIRCUIT BOARD, SINCE STATIC DISCHARGE MAY DAMAGE IT. ALWAYS TOUCH GROUND WHILE WORKING ON IT TO DISCHARGE ANY STATIC CHARGE BUILT UP.

6-1 Electrical Malfunction

SYMPTOM	CAUSE	CORRECTIONS
Oven is dead. Fuse is OK. No display and no operation at all.	1. Open or loose lead wire harness 2. Open thermal cutout (Magnetron) 3. Open low voltage transformer 4. Defective Ass'y PCB	Check fan motor when thermal cutout is defective. Check Ass'y PCB when LVT is defective.
No display and no operation at all. Fuse is blown.	1. Shorted lead wire harness 2. Defective primary latch switch (NOTE 1) 3. Defective monitor switch (NOTE1) 4. Shorted HVCapacitor 5. Shorted HVTransformer (NOTE2)	Check adjustment of primary, interlock monitor, door sensing switch.
	NOTE 1: All of these switches must be replaced at the same time. (refer to adjustment instructions) Check continuity of power relay contacts and if it has continuity, replace power relay also. NOTE 2: When HVTransformer is replaced, check diode and magnetron also.	
Oven does not accept key input (Program)	1. Key input is not in-Sequence 2. Open or loose connection of membrane key pad to Ass'y PCB 3. Shorted or open membrane panel 4. Defective Ass'y PCB	Refer to operation procedure. Replace PCB main.
Timer starts countdown but no microwave oscillation. (No heat while oven lamp and fan motor turn on.)	1. Off-alignment of latch switches 2. Open or loose connection of high voltage circuit especially magnetron filament circuit NOTE: Large contact resistance will bring lower magnetron filament voltage and cause magnetron to lower output and/or intermittent oscillation. 3. Defective high voltage components H.V.Transformer H.V.Capacitor H.V.Diode Magnetron 4. Open or loose wiring of power relay 5. Defective primary latch switch 6. Defective power relay or Ass'y PCB	Adjust door and latch switches. Check high voltage component according to component test procedure and replace if it is defective. Replace PCB main.

6-1 Electrical Malfunction(continued)

SYMPTOM	CAUSE	CORRECTIONS
Oven lamp and fan motor turn on	1. Misadjustment or loose wiring of primary latch switch 2. Defective primary latch switch	Adjust door and latch switches.
Oven can program but timer does not start.	1. Open or loose wiring of secondary interlock switch 2. Off-alignment of primary interlock 3. Defective secondary interlock S/W	Adjust door and interlock switches.
Microwave output is low;. Oven takes longer time to cook food.	1. Decrease in power source voltage. 2. Open or loose wiring of magnetron filament circuit. (Intermittent oscillation)) 3. Aging of magnetron	Consult electrician.
Fan motor turns on when plugged in	Loose wiring of door sensing switch	Check wire of door sensing switch.
Oven does not operate and return to the plugged in mode.	Defective Ass'y PCB	Replace PCB main.
Loud buzzing noise can be heard.	1. Loose fan and fan motor 2. Loose screws on H.V.Transformer 3. Shorted H.V.Diode	Tighten screws of fan motor. Tighten screws of H.V.Transformer. Replace H.V.Diode.
Turntable motor does not rotate.	1. Open or loose wiring of turntable motor. 2. Defective turntable motor.	Check the wire of turntable motor. Replace turntable motor.
Oven stops operation during cooking	1. Open or loose wiring of primary interlock switch 2. Operation of thermal cutout(Magnetron)	Adjust door and latch switches.
Sparks	1. Metallic ware or cooking dishes touching on the oven wall. 2. Ceramic ware trimmed with gold or silver powder also causes sparks.	Inform the customer. Do not use any type of cookware with metallic trimming.
Uneven cooking	Uneven intensity of microwave due to its characteristics.	Wrap thinner parts of the food with aluminum foil. Use plastic wrap or cover with a lid. Stir once or twice while cooking foods such as soup, cocoa, or milk.
Noise from the turntable motor when it starts to operate.	Noise may result from the motor.	Replace turntable motor.

7. Exploded Views and Parts List

7-1 Exploded Views

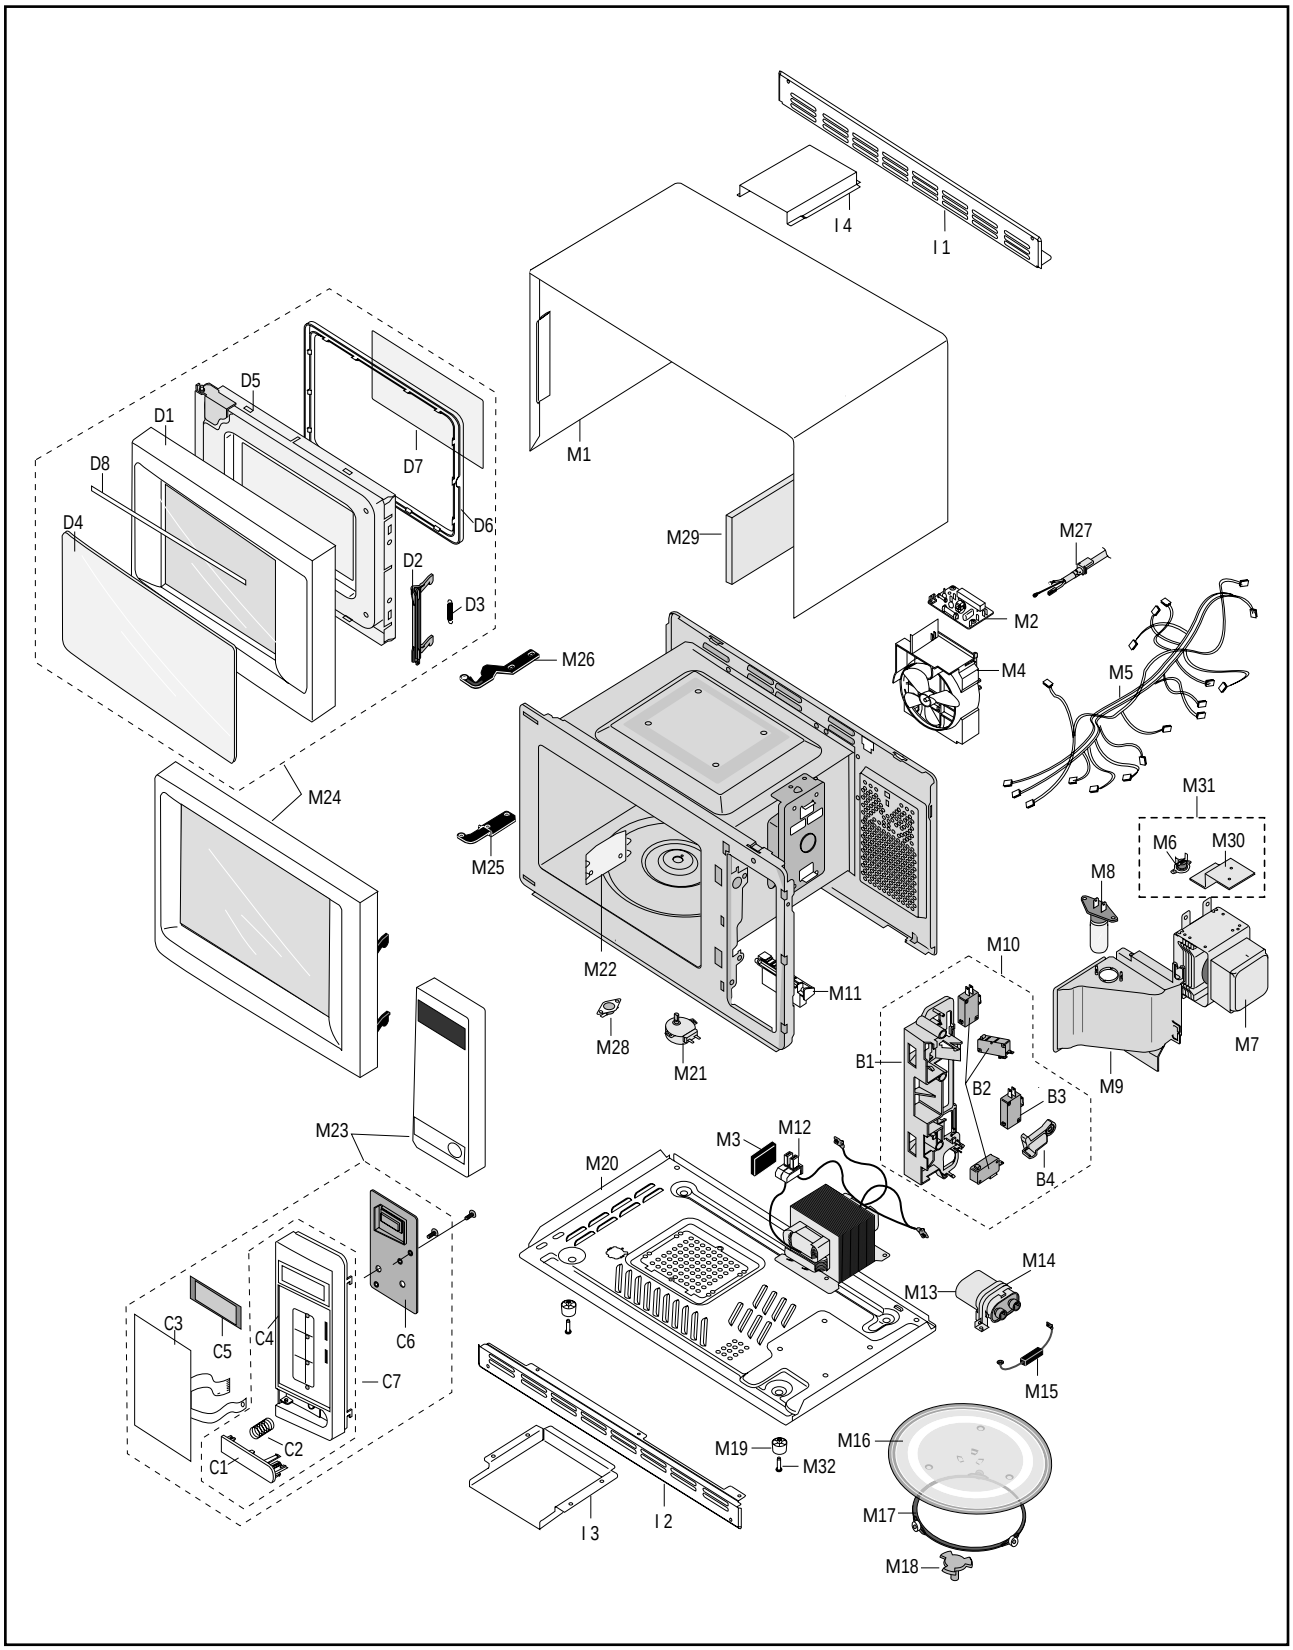

7-2 Main Parts List (MR5481G / MR5482W)

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
M 1	DE70-30001W	PANEL-OUTER;V/STEEL T0.5+T0.2 W360 L1128	1	MR5481G ●
M 1	DE70-30001U	PANEL-OUTER;SECC T0.6 W360 L1128 WHT MR548	1	MR5482W ●
M 2	DE91-40100A	ASSY NOISE FILTER;SN-U15A 250V 15A SECA	1	
M 4	DE31-10156B	MOTOR-FAN;SMF-557UC 120/60 2600 MW5574W	1	
M 5	DE39-40682A	WIRE HARNESS-A;120V60HZ MR6482GSEA (RV)	1	
M 6	DE47-20009A	THERMOSTAT;CS-7SA(160/60)187Y 250V7.5A 1	1	
M 7	DE03-30035A	MAGNETRON;OM75PH(31)ESS	1	⚠
M 8	4713-001012	LAMP-INCANDESCENT;130V,-,40W,ORG,B/L,-,2	1	
M 9	DE71-60016A	COVER-AIR;PP 2 WHT M945/MB45	1	
M 10	DE93-20001A	ASSY BODY LATCH;2ND-W1 M97G45/M9745	1	
M 11	DE66-90013A	LEVER-DOOR;POM(F20-01) NTR MW5630T	1	
M 12	DE26-10134A	TRANS-H.V;SHV-5574UC1 120V 2160V/3.35V	1	⚠
M 13	2501-001039	C-OIL;910nF,2100V,BK,35x54x75,20mm	1	
M 14	DE61-50106A	BRACKET-HVC;SECC T0.8 W31 L125.8	1	
M 15	DE91-70063A	ASSY-H.V.D;V2M6 PI9.0 0.05MT	1	
M 16	DE74-20015B	TRAY-COOKING;GLASS T6.0 PI318 1050G MW56	1	
M 17	DE92-90189D	ASSY-GUIDE ROLLER;D19 STD	1	
M 18	DE67-60026C	COUPLER;PTFE 12G WHT MB245	1	
M 19	DE61-40065A	FOOT;PP BLK T2x22x17mm	2	
M 20	DE80-10001A	BASE-PLATE;SGCC T0.8 345 565	1	
M 21	DE31-10154A	MOTOR-DRIVE;M2HJ49ZR02,ST-16 21V 5/6	1	
M 22	DE71-60011A	COVER-MGT;PP T2.0 WHT M745	1	
M 23		ASSY CONTROL-BOX;120V60Hz MR5481G D/GRY	1	MR5481G ● ⚠
M 23		ASSY CONTROL-BOX;120V60Hz MR5482W WHT	1	MR5482W ● ⚠
M 24		ASSY DOOR;TOUCH GRAY MW5471G	1	MR5481G ● ⚠
M 24		ASSY DOOR;TOUCH WHT MW5470W 800W	1	MR5482W ● ⚠
M 25	DE61-80003A	HINGE-LOWER;SCP1 T2.3 26 77 ZPC3 WHT CHR	1	
M 26	DE61-80002A	HINGE-UPPER;SCP1 T2.3 26 77 ZPC3 WHT CHR	1	
M 27	DE39-20037G	ASSY POWER CORD;KKP-30B 120V60HZ 1150 GRY	1	
M 28	DE47-20173A	THERMOSTAT;PW-2N(90/60)30 187Y 250V7.5A	1	
M 29	DE63-90035G	CUSHION-RUBBER;DFA20 T2 W190 L100 BLK	1	
M 30	DE61-50490A	BRACKET-TCO;SECC1 T0.6 34 58	1	
M 31	DE91-70101C	ASSY-THERMOSTAT;MW5574W 160/60 187-HORIZ	1	
M 32	DE60-60025A	PIN-FOOT;PP-JI350 BLK	1	

● : Option Parts ⚠ : Warning ⚠ :Electrostatically Sensitive Devices

7-3 Door Parts List (MR5481G / MR5482W)

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
D 1	DE64-40241B	DOOR-A;ABS WHT (HRO370) GRY MW5471G	1	MR5481G
D 1	DE64-40241A	DOOR-A;ABS WHT M841	1	MR5482W
D 2	DE64-40006A	DOOR-KEY;POM(TC3005) T2.0 12GR BLK CE945G	1	MR5481G
D 2	DE64-40006B	DOOR-KEY;POM(TC3005) T2 12GR WHT MW5574	1	MR5482W
D 3	DE61-70032A	SPRING-KEY;ES HSWR PI0.6 D5.4 L25 MW8640	1	
D 4	DE67-20157B	SCREEN-DOOR;PC T0.5 181.5 331.5 GRY MW5471G	1	MR5481G
D 4	DE67-20157A	SCREEN-DOOR;PC T0.5 188 331 PURE-WHT NEWGU	1	MR5482W
D 5	DE92-50127H	ASSY DOOR-E;COATING BLACK T0.8	1	MR5481G
D 5	DE92-50127I	ASSY DOOR-E;COATING WHITE T0.8	1	MR5482W
D 6	DE64-40012A	DOOR-C;RESIN-PP(TB53) T2.0 CE945GF BLACK	1	MR5481G
D 6	DE64-40040B	DOOR-C;PP(TB53) T1.5 BLK 1.2CU.FT M245	1	MR5482W
D 7	DE01-00002B	FILM-DOOR;PC T0.15 275 175 MW5574W	1	

7-4 Control Parts List (MR5481G / MR5482W)

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
C 1	DE66-20010B	BUTTON-PUSH;ABS D-GRY MW4371G	1	MR5481G
C 1	DE66-20010A	BUTTON-PUSH;ABS (VH-080) WHT 17.6G MW4370W	1	MR5482W
C 2	DE61-70076A	SPRING-BUTTON;HSWR PI0.6	1	
C 3	DE34-10217S	SWITCH-MEMBRANE;PET 120V 0.5A 174.5x91.5	1	MR5481G
C 3	DE34-10217V	SWITCH-MEMBRANE;PET 120V60HZ W91.5xL174.5	1	MR5482W
C 4	DE72-70161B	CONTROL-PANEL;ABS(HR0370U) GRY MW5471G	1	MR5481G
C 4	DE72-70161A	CONTROL-PANEL;ABS(VH-0800) PURE-WHT MW5470W	1	MR5482W
C 5	DE67-40003A	WINDOW-DISPLAY;ACRYL T2.3 W36.8 L91.8 SM	1	
C 6	DE91-10368A	ASSY P.C.B-MAIN;120V/60HZ NS V.F.D N/HEL	1	
C 7	DE93-30402B	ASSY CONTROL-PANEL;NEWGARD 0.9	1	MR5481G
C 7	DE93-30402A	ASSY CONTROL-PANEL;120V60HZ NEWGARD MW5470W	1	MR5482W

7-5 Body Latch Parts List (MR5481G / MR5482W)

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
B 1	DE66-40001A	LATCH-BODY;POM(F20-02) 40GR NTR	1	
B 2	3405-000178	SWITCH-MICRO;250V,15A,200gf,SPST-NO	3	
B 3	3405-000175	SWITCH-MICRO;250V,15A,200gf,SPST-NO	1	
B 4	DE66-90001A	LEVER-SWITCH;P.O.M(F20-02) 2 6 NTR 2ND-W	1	

7-2 Main Parts List (MR6481G / MR6482W)

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
M 1	DE70-30002K	PANEL-OUTER;V/STEEL T(0.5+0.2) W424.7 L1155	1	MR6481G ●
M 1	DE70-30002J	PANEL-OUTER;SECC T0.6 W424.7 L1155 P/WHT	1	MR6482W ●
M 2	DE91-40101A	ASSY NOISE FILTER;SN-U20A 250V 20A SECA	1	
M 3	DE63-90167A	CHSHION-HVT;NEOPRENE/RUBBER T36.5 W40 L50 B	1	
M 4	DE31-10157A	MOTOR-FAN;SMF 657UC 120/60 2600 MB6774W	1	
M 5	DE39-40682A	WIRE HARNESS-A;120V60HZ MR6482G SEA(RV)	1	
M 6	DE47-20009A	THERMOSTAT;CS-7SA(160/60)187Y 250V7.5A 1	1	
M 7	DE03-30035A	MAGNETRON;OM75PH(31)ESS	1	⚠
M 8	4713-001012	LAMP-INCANDESCENT;130V,-,40W,ORG,B/L,-,2	1	
M 9	DE71-60016A	COVER-AIR;PP 2 WHT M945/MB45	1	
M 10	DE93-20001A	ASSY BODY LATCH;2ND-W1 M97G45/M9745	1	
M 11	DE66-90013A	LEVER-DOOR;POM(F20-01) NTR MW5630T	1	
M 12	DE26-10134A	TRANS-H.V;SHV-5574UC1 120V 2160V/3.35V	1	⚠
M 13	2501-001011	C-OIL;910pF,2100V,BLK,54x35x75mm,20mm	1	
M 14	DE61-50106A	BRACKET-HVC;SECC T0.8 W31 L125.8	1	
M 15	DE91-70063A	ASSY-H.V.D;V2M6 PI9.0 0.05MT	1	
M 16	DE74-20002A	TRAY-COOKING;GLASS T6. PI360 1.2CUFT NEG	1	
M 17	DE92-90189B	ASSY-GUIDE ROLLER;D16.5 STD	1	
M 18	DE67-60002A	COUPLER;PPS 5GR BRN M97G45		
M 19	DE61-40065A	FOOT;PP BLK T2x22x17mm	2	
M 20	DE80-10002C	BASE-PLATE;SGCC T0.8 L404 L633 MR6481G	1	
M 21	DE31-10154A	MOTOR-DRIVE;M2HJ49ZR02,ST-16 21V 5/6	1	
M 22	DE71-60164F	COVER-MGT;PP (TB53/A353) 30G MW5430/6430	1	
M 23		ASSY CONTROL-BOX;120V60Hz MR6481G GRAY	1	MR6481G ● ⚠
M 23		ASSY CONTROL-BOX;120V60Hz MR6482W WHT	1	MR6482W ● ⚠
M 24		ASSY DOOR;P/BUTTON D/GRY MW6371G NEGARD	1	MR6481G ● ⚠
M 24		ASSY DOOR;P/BUTTON WHT MW6370W NEGARD	1	MR6482W ● ⚠
M 25	DE61-80003A	HINGE-LOWER;SCP1 T2.3 26 77 ZPC3 WHT CHR	1	
M 26	DE61-80002A	HINGE-UPPER;SCP1 T2.3 26 77 ZPC3 WHT CHR	1	
M 27	DE39-20037G	ASSY POWER CORD;KKP-30B 120V60HZ 1150 GRY	1	
M 28	DE47-20033A	THERMOSTAT;PW-2N 80/70 125V15A/250V7.5A 187	1	
M 29	DE63-90035I	CUSHION-RUBBER;DFA20 T1.5 W190 L100 BLK JE1	1	
M 30	DE61-50490A	BRACKET-TCO;SECC1 T0.6 34 58	1	
M 31	DE91-70101C	ASSY-THERMOSTAT;MW5574W 160/60 187-HORIZ	1	
M 32	DE60-60025A	PIN-FOOT;PP-JI350 BLK	1	

● : Option Parts ⚠ : Warning ⚠ :Electrostatically Sensitive Devices

7-3 Door Parts List (MR6481G / MR6482W)

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
D 1	DE64-40241B	DOOR-A;ABS WHT (HRO370) GRY MW5471G	1	MR6481G
D 1	DE64-40242A	DOOR-A;ABS T2.5 W300 L450 300G	1	MR6482W
D 2	DE64-40006A	DOOR-KEY;POM(TC3005) T2.0 12GR BLK CE945G	1	MR6481G
D 2	DE64-40006B	DOOR-KEY;POM(TC3005) T2 12GR WHT MW5574W	1	MR6482W
D 3	DE61-70128A	SPRING-KEY;HSW3 PI0.6 D5 BLUING	1	
D 4	DE64-40262B	DOOR-SCREEN;PC T0.5 W205 L394 MW6371G	1	MR6481G
D 4	DE64-40262A	DOOR-SCREEN;PC T0.5 W205 L384 NEWGARD	1	MR6482W
D 5	DE92-50128F	ASSY DOOR-E;COATING BLK MW6575G	1	MR6481G
D 5	DE92-50128E	ASSY DOOR-E;COATING WHT MW6574W	1	MR6482W
D 6	DE64-40010B	DOOR-C;PP(TB53) T1.5 BLK 1.2CU.FT M245	1	MR6481G
D 6	DE64-40010A	DOOR-C;PP(TB53) T1.5 WHTMW6574W	1	MR6482W
D 7	DE01-00004A	FILM-DOOR;PE T0.15 W189 L331 NTR 1.2CU.FT	1	
D 8	DE02-00082A	TAPE-DOUBLE FACE;PET T0.4 W9 WHT SEIL SI	1	

7-4 Control Parts List (MR6481G / MR6482W)

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
C 1	DE66-20010B	BUTTON-PUSH;ABS D-GRY MW4371G	1	MR6481G
C 1	DE66-20010A	BUTTON-PUSH;ABS(VH080) WHT 17.6G MW4370W	1	MR6482W
C 2	DE61-70076A	SPRING-BUTTON;HSWR PI0.6	1	
C 3	DE34-10217N	SWITCH-MEMBRANE;PET 125V 91X190 MR6481G	1	MR6481G
C 3	DE34-10217M	SWITCH-MEMBRANE;PET 125V 91X190 MR6482W	1	MR6482W
C 4	DE72-70162B	CONTROL-PANEL;ABS250G D/GRY T2.5 MW6371G	1	MR6481G
C 4	DE72-70162A	CONTROL-PANEL;ABS 250G T2.5	1	MR6482W
C 5	DE67-40003A	WINDOW-DISPLAY;ACRYL T2.3 W36.8 L91.8 SM	1	
C 6	DE91-10368A	ASSY P.C.B-MAIN;120V/60HZ NS V.F.D N/HEL	1	
C 7	DE93-30405B	ASSY CONTROL-PANEL;120V60HZ MW6371G 1.2(D/GRY)	1	MR6481G
C 7	DE93-30405A	ASSY CONTROL-PANEL;120V60HZ MW6370W 1.2(WHT)	1	MR6482W

7-5 Body Latch Parts List (MR6481G / MR6482W)

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
B 1	DE66-40001A	LATCH-BODY;POM(F20-02) 40GR NTR	1	
B 2	3405-000178	SWITCH-MICRO;VP-533A-OF-PS(T85) 250V,15A	3	
B 3	3405-000175	SWITCH-MICRO;VP-531A-OF(T85) 250V,15A,20	1	
B 4	DE66-90001A	LEVER-SWITCH;P.O.M(F20-02) 2 6 NTR 2ND-W	1	

7-6 Standard Parts List (MR5481G/MR5482W/MR6481G/MR6482W)

Parts No.	Description / Specification	Q'ty	Remarks
DE60-10082A	SCREW-A;M4 L12 2S TOOTHED	2	BASE
DE60-10088A	SCREW-TAP PH;PH M3 L8 FEFZY PLAIN	2	PCB
DE60-10082A	SCREW-A;M4 L12 2S TOOTHED	2	B-LATC
DE60-10082A	SCREW-A;M4 L12 2S TOOTHED	2	C-PANE
DE60-10082A	SCREW-A;M4 L12 2S TOOTHED	5	O-PANEL
DE60-10082A	SCREW-A;M4 L12 2S TOOTHED	1	P/EART
DE60-10080A	SCREW-WASHER;M5 L12 2S	4	HVT
DE60-10080A	SCREW-WASHER;M5 L12 2S	4	MGT
DE60-10033A	SCREW-TH;TH + M4 L10 MSWR10 FEFZY	2	HI-LOW
DE60-10082A	SCREW-A;M4 L12 2S TOOTHED	2	C-BLOW
DE60-10033A	SCREW-TH;TH + M4 L10 MSWR10 FEFZY	2	HI-UPP
DE60-10045A	SCREW-TAP PH;PH M3 L6 FEFZY	2	MGT-TC
DE60-10082A	SCREW-A;M4 L12 2S TOOTHED	1	MEM-PN
DE60-10098A	SCREW-ASSY TAPTITE;PH TC M4X8 SWRCH18A Z	1	CV-TCO
DE60-10098A	SCREW-ASSY TAPTITE;PH TC M4X8 SWRCH18A Z	2	M/GEAR
DE60-10113A	SCREW-TAP PH;2S-4X12 FE ZPC3	1	FUSE-H
DE60-10188A	SCREW-ASSY TAP;2S-4X8 MSW3ZPC YEL WS	Q1	B/HVC

7-7 Installation Parts List (MR5481G/MR5482W/MR6481G/MR6482W)

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
I 1	DE64-90154A	TRIMMER-UPPER;SECC T0.8 W53.1 L532.2	1	MR5481G
I 1	DE64-90154B	TRIMMER-UPPER;SECC T0.8 W53.1 L532.2 WHT	1	MR5482W
I 1	DE64-90153A	TRIMMER-UPPER;SECC T0.8 W54 L571 BLK COATI	1	MR6481G
I 1	DE64-90153B	TRIMMER-UPPER;SECC T0.8 W54 L571 WHT COATI	1	MR6482W
I 2	DE64-90155A	TRIMMER-LOWER;SECC T0.8 W42.3 L532.2	1	MR5481G
I 2	DE64-90155B	TRIMMER-LOWER;SECC T0.8 W42.3 L532.2 WHT	1	MR5482W
I 2	DE64-90155A	TRIMMER-LOWER;SECC T0.8 W42.3 L571 BLK COATI	1	MR6481G
I 2	DE64-90152B	TRIMMER-LOWER;SECC T0.8 W54 L571 WHT COATI	1	MR6482W
I 3	DE70-40311A	PLATE-BOTTOM;SGCC T0.6 W253 L264.5 MR5481	1	
I 4	DE72-50092A	DUCT-AIR;SGCC T0.6 W150 L212 MR5481G	1	

8. P.C.B Diagrams

8-1 P.C.B Diagrams

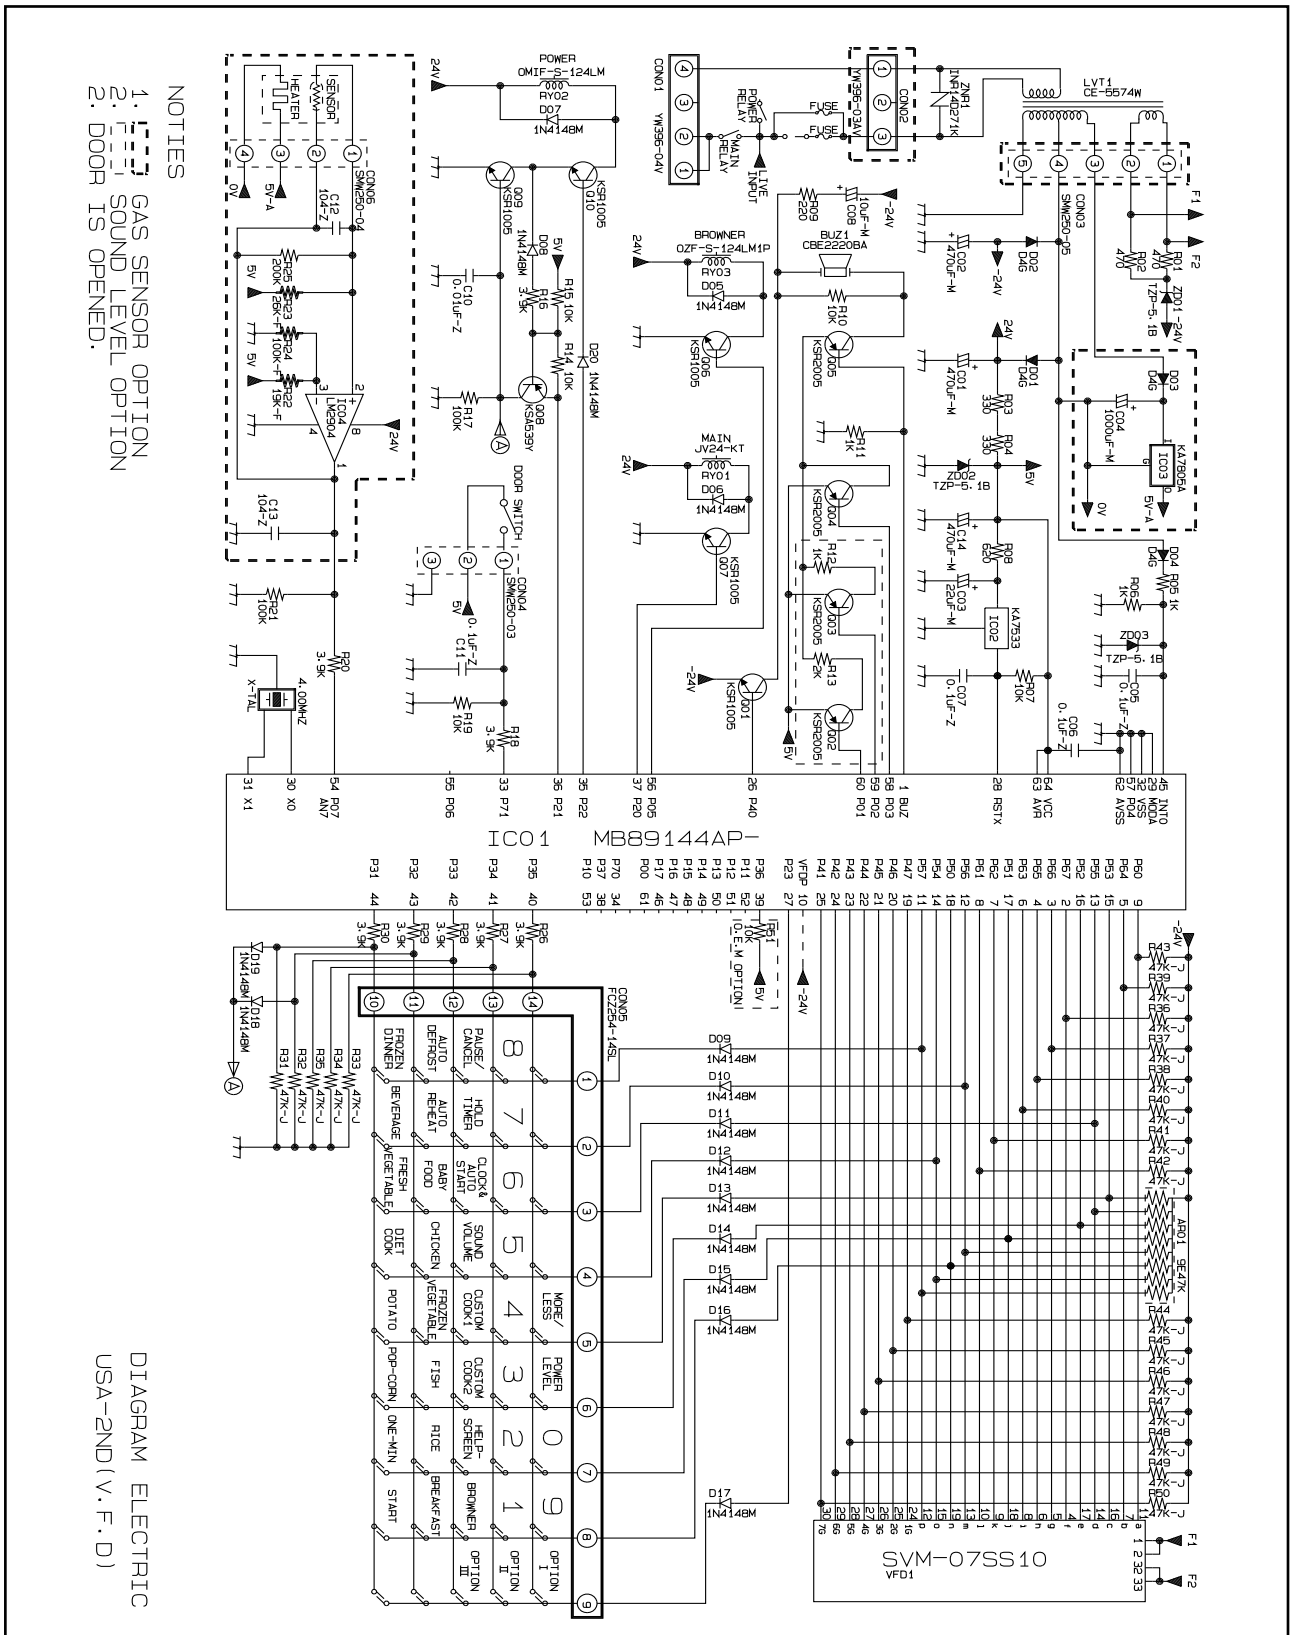

8-2 P.C.B Parts List

Parts No.	Description / Specification	Q'ty	Remarks
0401-001002	DIODE-SWITCHING;1N4148M,100V,200mA,500mW	16	D05~20
0402-000559	DIODE-RECTIFIER;D4G,400V,1A,T-1	3	D01,02,04
0501-000283	TR-SMALL SIGNAL;KSA539-Y,PNP,400mW,TO-92	1	Q08
0504-001014	TR-DIGITAL;KSR1005,NPN,300mW,4.7K-10K,TO	5	Q01,06,07,09,10
0504-001015	TR-DIGITAL;KSR2005,PNP,300mW,4.7K-10K,TO	4	Q02~05
1405-000129	VARISTOR;INR14D271K 270V,4500A 17X12MM,T	1	ZNR1
2001-000037	R-CARBON(S);330ohm,5%,1/2W,AA,TP,2.4x6.4	2	R03~04
2001-000273	R-CARBON;100Kohm,5%,1/8W,AA,TP,1.8x3.2m	2	R17,21
2001-000290	R-CARBON;10Kohm,5%,1/8W,AA,TP,1.8x3.2mm	5	R07,10,14,15,19
2001-000429	R-CARBON;1Kohm,5%,1/8W,AA,TP,1.8x3.2mm	4	R05,06,11,12
2001-000515	R-CARBON;220ohm,5%,1/8W,AA,TP,1.8x3.2mm	1	R09
2001-000577	R-CARBON;2Kohm,5%,1/8W,AA,TP,1.8x3.2mm	1	R13
2001-000613	R-CARBON;3.9Kohm,5%,1/8W,AA,TP,1.8x3.2m	8	R16,18,20,26~30
2001-000780	R-CARBON;470ohm,5%,1/8W,AA,TP,1.8x3.2mm	2	R01,02
2001-000786	R-CARBON;47Kohm,5%,1/8W,AA,TP,1.8x3.2mm	20	R31~50
2001-000904	R-CARBON;620ohm,5%,1/8W,AA,TP,1.8x3.2mm	1	R08
2011-000582	R-NETWORK;47Kohm,5%,1/8W,A,SIP,9P,TP	1	AR01
2202-000121	C-CERAMIC,MLC-AXIAL;UP050B101KBB 100PF,1	1	C09
2202-000127	C-CERAMIC,MLC-AXIAL;TP050F103ZB 10NF,+80	1	C10
2202-000780	C-CERAMIC,MLC-AXIAL;UP050F104Z 100NF,+80	4	C05~07,11
2401-000247	C-AL;1SA1ANB107MAN 100UF,20%,10V,GP 6.3X	1	C14
2401-000466	C-AL;CESSM1V100M0507 10UF,20%,35V,GP 5X7	1	C08
2401-000914	C-AL;CESSL1C220M0511AA 22UF,20%,16V,GP 5	1	C03
2401-001412	C-AL;1SG1VFB477MAN 470UF,20%,35V,GP 10X1	2	C01,02
2802-000161	RESONATOR-CERAMIC;CST4.00MGW-TF01-3/CN 4	1	X-TAL
3501-001014	RELAY-POWER;OM1F-S-124LM 24V,21.8MA,17A	1	RY02
3501-001016	RELAY-MINIATURE;JV24-KT 24V,12.5MA,5A 1F	1	RY01
3708-000529	CONNECTOR-FPC/FC/PIC;FCZ254-14SL,BLK 14P	1	CON05
3711-000240	CONNECTOR-HEADER;1WALL,4P,1R,3.96mm,STRA	1	CON01
3711-000881	CONNECTOR-HEADER;SMW250-03,WHT BOX,3P,1R	1	CON04
A4106-0154	DIODE-ZENER;TZP5.1B 5.1/5.7V 40MA T 1W	3	ZD01~03
DE07-10035A	V.F.DISPLAY;SVM-07SS10 SEA	1	VFD1
DE09-30491A	IC-MCU;MB89143AP-168 8K DIP 64PIN	1	IC01 ⚠
DE13-20009A	IC;KA7533 DIP	1	IC02
DE26-20144A	TRANS-L.V;DN-5574W,CE-5574W 120V 60HZ AC	1	LVT1
DE30-20016A	BUZZER;CBE2220BA STICK	1	BUZ1
DE39-60001A	WIRE-SO COPPER;PI0.6 SN T 52MM	25	J01~25
DE60-60012A	PIN-EYELET;ID2.1 OD2.5 L3.0 SN BSP T0.25	8	
DE61-90164A	HOLDER-DIGITRON;NYLON#66 T1.8 BLK MW4370	1*	

9. Schematic Diagrams

9-1 Schematic Diagrams

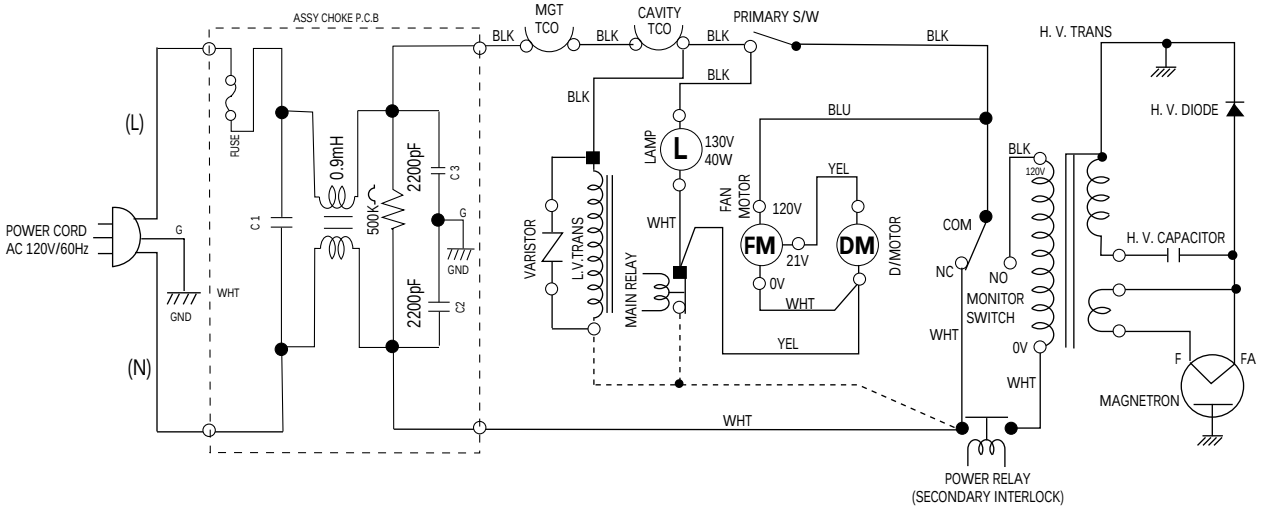

1. INPUT : 120V 60HZ
2. DOOR : OPEN
3. LAMP : ON
4. - - - - : P.C.B PATTERN
5. ■ : P.C.B IN/OUT POINT (CON1)

WHT : WHITE
BLK : BLACK
YEL : YELLOW
BLU : BLUE
ORG : ORANGE
G : GREEN



PRIMARY INTERLOCK SWITCH



INTERLOCK MONITOR SWITCH



DOOR SENSING SWITCH

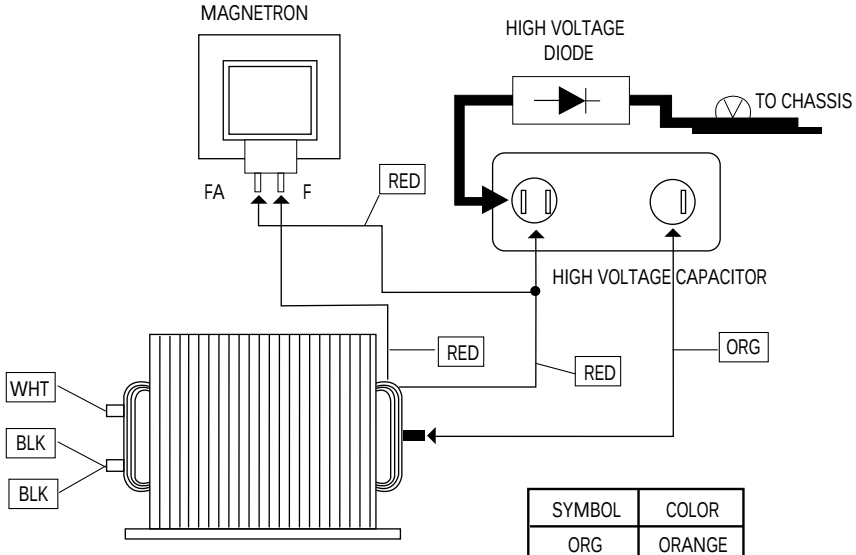

SYMBOL	COLOR
ORG	ORANGE
WHT	WHITE
BLK	BLACK
BLU	BLUE
RED	RED